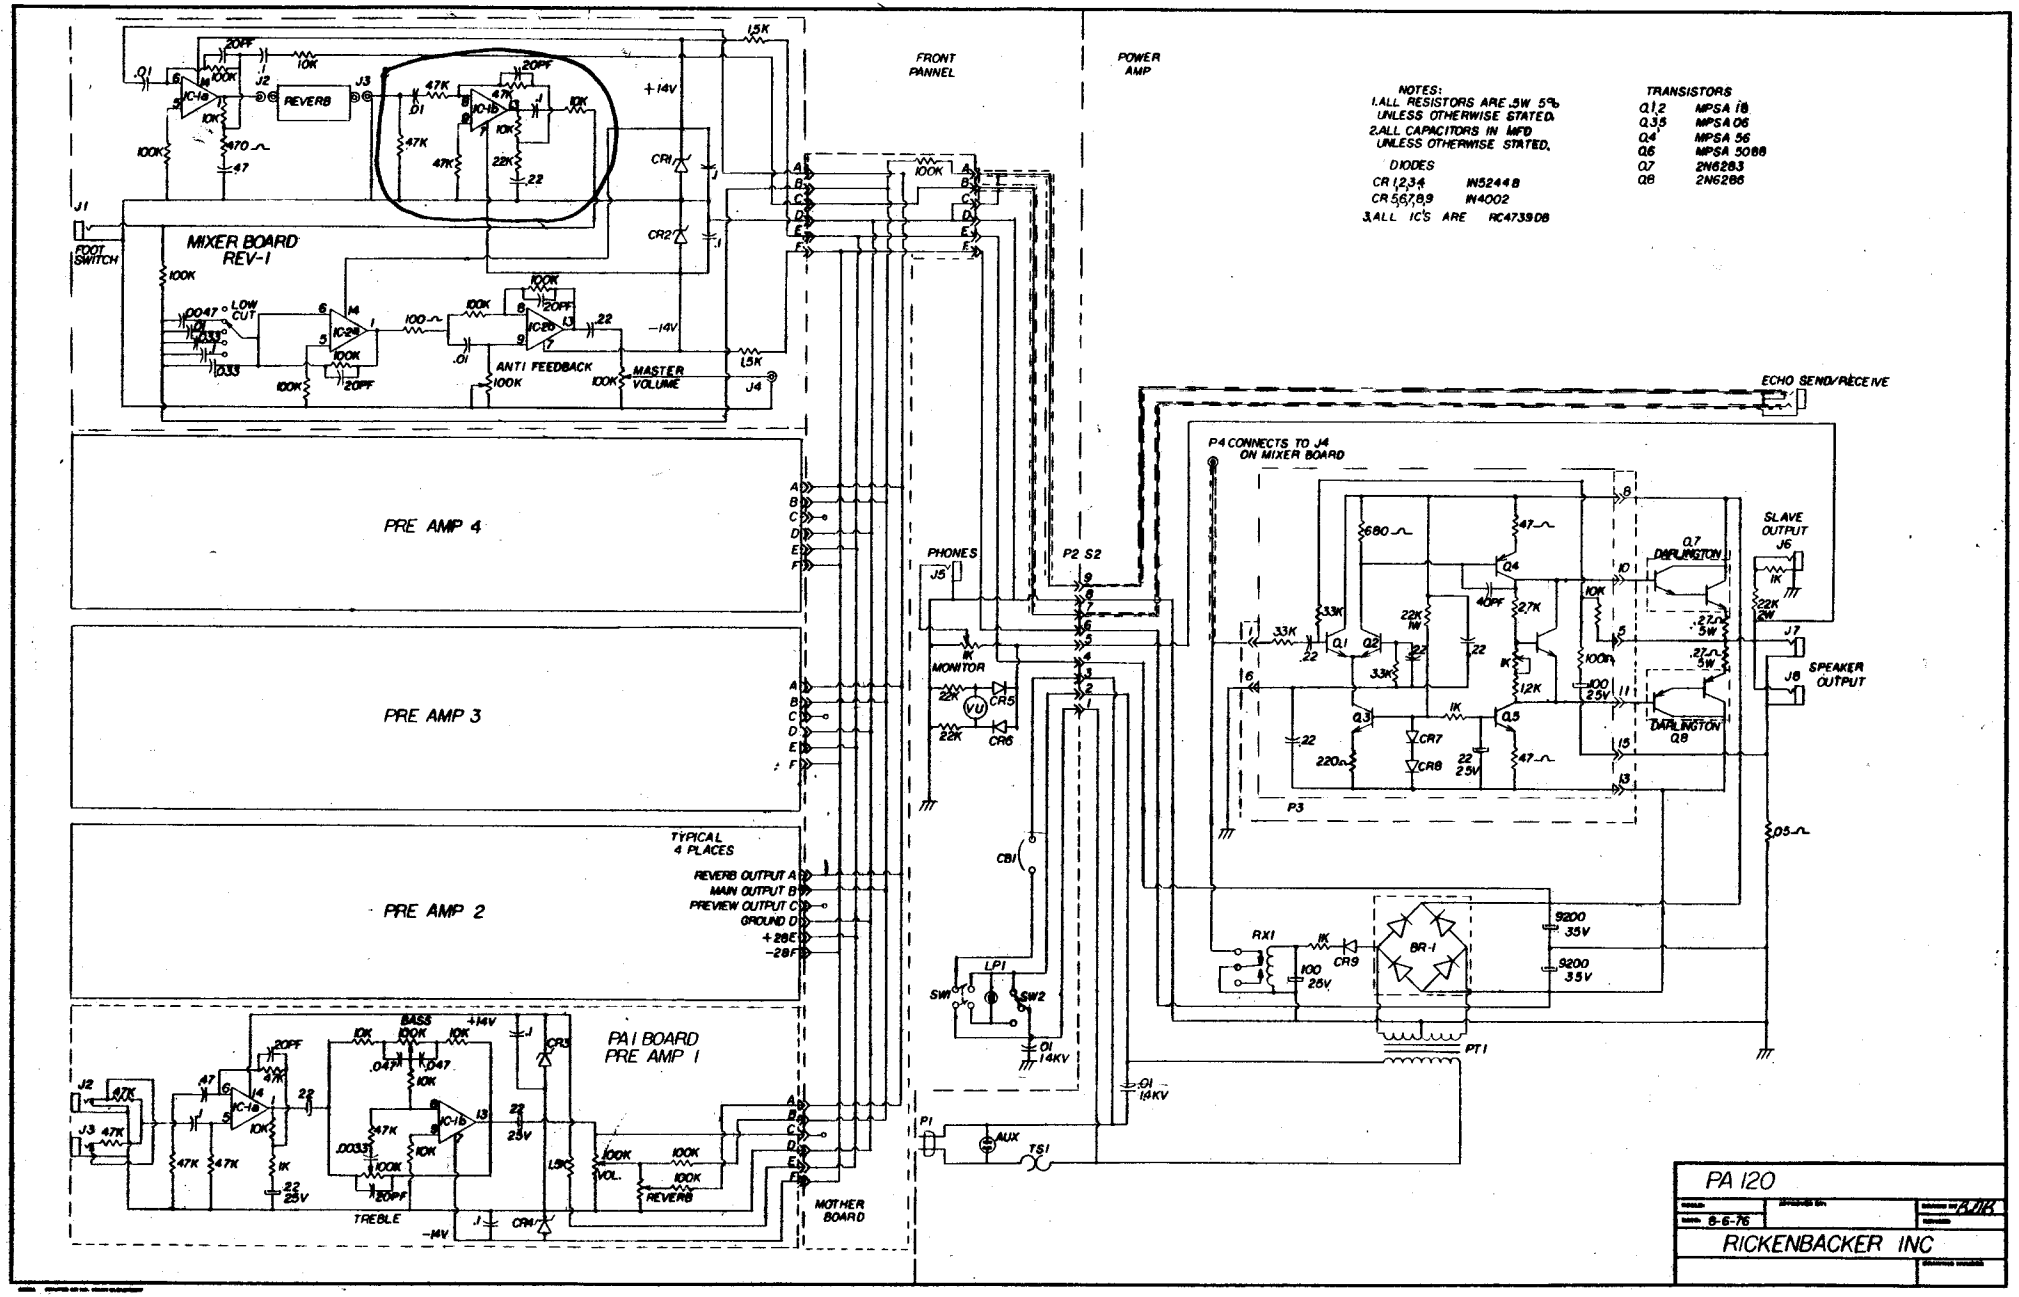
FRONT PANNEL
POWER AMP
NOTES:
1.ALL RESISTORS ARE .5W 5% UNLESS OTHERWISE STATED.
2.ALL CAPACITORS IN MFD UNLESS OTHERWISE STATED.
DIODES
CR 1,2,3,4 IN5244B
CR 5,6,7,8,9 IN4002
3.ALL IC'S ARE RC4739DB
TRANSISTORS
Q1,2 MPSA 18
Q3,5 MPSA 06
Q4 MPSA 56
Q6 MPSA 5088
Q7 2N6283
Q8 2N6286
MIXER BOARD REV-1
REVERB
FOOT SWITCH
LOW CUT
ANTI FEEDBACK
MASTER VOLUME
+14V
-14V
PRE AMP 4
PRE AMP 3
PRE AMP 2
TYPICAL 4 PLACES
REVERB OUTPUT A
MAIN OUTPUT B
PREVIEW OUTPUT C
GROUND D
+28E
-28F
PA1 BOARD PRE AMP 1
BASS
TREBLE
VOL.
REVERB
MOTHER BOARD
PHONES J5
MONITOR
P2 S2
CB1
LP1
SW1
SW2
AUX
TS1
P1
P4 CONNECTS TO J4 ON MIXER BOARD
P3
ECHO SEND/RECEIVE
SLAVE OUTPUT J6
SPEAKER OUTPUT J8
DARLINGTON Q7
DARLINGTON Q8
BR-1
PT1
PA 120
8-6-76
RICKENBACKER INC